


Technote 39 - Example Meter Connection to AcquiSuite with ModHoppers

Author: Michael Hewitt

Example Pulse Meter Scenario 1

The first example shows a connection from a pulse meter to an AcquiSuite using ModHoppers in which 2 or fewer pulse inputs are required.

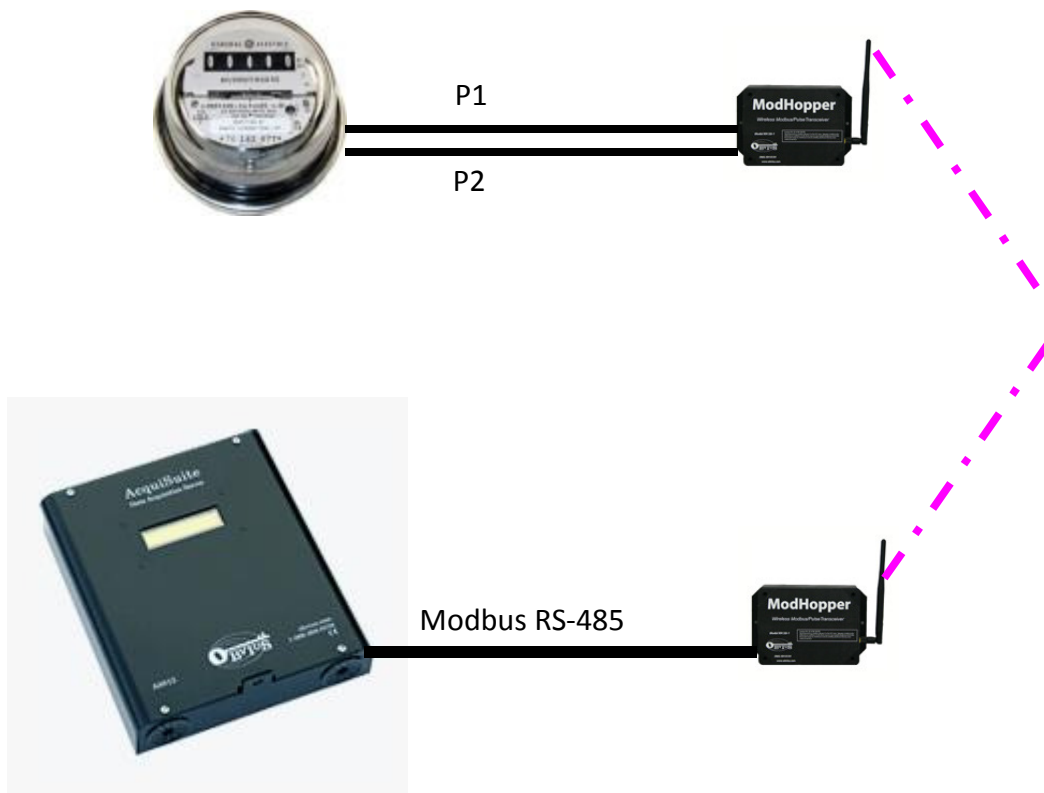

Example Pulse Meter Scenario 2

The second example shows a connection from a pulse meter to an AcquiSuite using ModHoppers in which 2 or more pulse inputs are required. If two or more pulse inputs are required, the meter pulse contacts can be wired to an I/O module, which then connects via RS485 to a ModHopper.

